
Servo-u

- short guide

Setting up

 
- Plug in the power cord and connect air and oxygen hoses.
- 2. Open the hatch on the side and switch the ventilator on.
- Start the Pre-use check (PUC). Follow on-screen instructions. The Patient circuit test (PCT) can be skipped during PUC and done separately and redone when the circuit/accessories has been changed. The PCT must be performed with a complete patient circuit, including all accessories (e.g humidifier chamber filled with water, filter and nebulizer).
- Choose Patient category: adult, pediatric or neonatal (optional).
- 5. Choose **Ventilation type**: invasive or non invasive.
- Calculate Predicted Body Weight (PBW) automatically by tapping PBW and enter patient gender and height. (For pediatric and neonatal patient category it is the patient's weight). Tidal Volume in ml/kg will now be monitored.
- 7. Tap **Ventilation modes**. Tap and hold the mode to get more information.
- 8. Choose mode and adjust the settings.
- 9. Some settings have dynamic images.
- 10. The safety scale can be expanded by tapping .
- 11. Adjust alarm limits if necessary in th alarm window.
- 12. Tap Start ventilation.

Refer to user manual for detailed information.

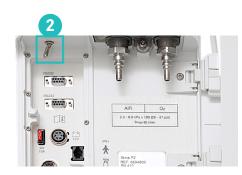












Alarm audio silenced – Active alarms can be silence for two minutes.



Pre-silence alarms – Most alarms are pre-silenced for 2 min.

Short cut - tap on the metirc to adjust alarm limits directly.




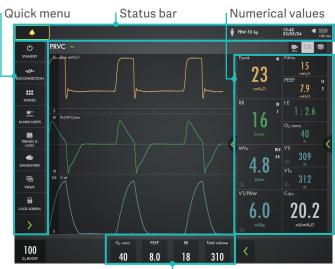

Direct access bar

Current measured value

Autoset Alarm limits in controlled modes

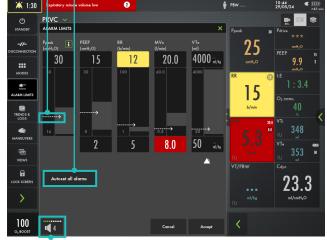

Alarm volume

Stop ventilation: tap **Standby** and tap and hold **Disconnection**

Maneuvers: Open Lung tool (option), Nebulization, Static Measurements, Manual Breath, O₂ boost level and Pes Catheter Positioning (option)

Views



